

DT2.18BT

Bluetooth 2.1 Multimedia Speaker

Item ref: 100.060UK

User Manual

CAUTION!

Please read this manual carefully. This product is not design for children or incapable person to use without supervision.



 
Risk of electric shock, please do not disassemble unit. Not serviceable, repair by professional certified personnel only.




SPECIFICATION:

Power	-	18Wrms (12W subwoofer, 3W each satellite speaker)
Driver	-	4" subwoofer, 2 x 2.5" satellite speaker
Impedance	-	6Ω subwoofer, 4Ω satellite speaker
Frequency response	-	40Hz – 18kHz
Signal/Noise	-	≥62dB
Power	-	220-240Vac / 50-60Hz
Dimension	-	Subwoofer 235 x 215 x 150mm Satellite speaker 170 x 85 x 70mm

FRONT LAYOUT:

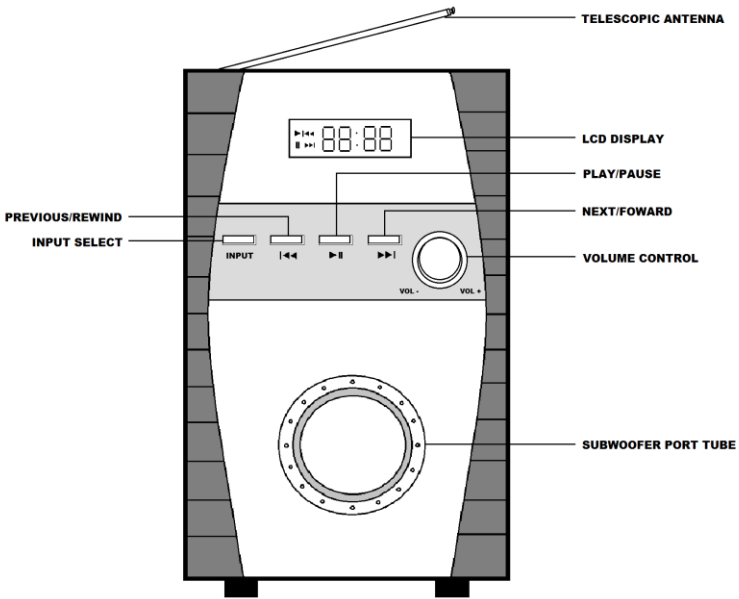

BACK LAYOUT:

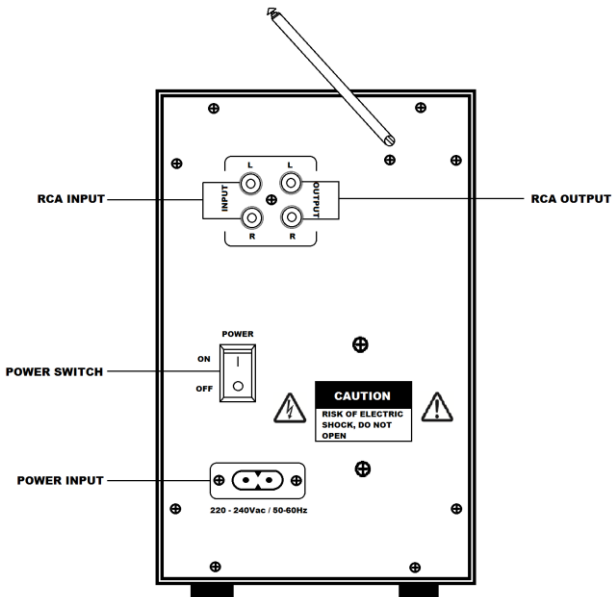 


INSTALLATION:

Please read through this manual carefully before setup.

Please ensure both mains and speaker power is switched off before setup.

- Connect satellite speakers to the main unit's RCA output.
- Connect supplied fig.8 power lead to the power input of the main unit.
- Connect music source into RCA line input, use the 2 x RCA to 3.5mm adaptor lead provided if the music source only has 3.5mm output.
- Plug power lead to mains socket and switch on both mains and speaker.

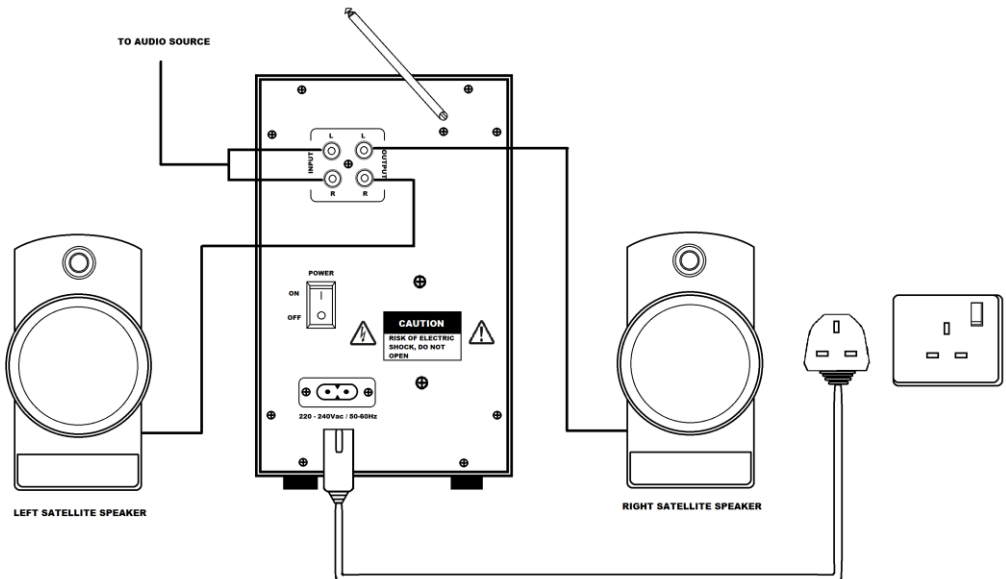

OPERATION:

FM Radio:

To start up FM radio function please follows these steps:

- Press INPUT button on the front panel of the main unit or Mode from the remote control until FM frequency is displayed on the LCD display screen.
- Pressing PLAY/PAUSE will automatically search through all frequencies and register all available channels.
- Once search is finished, the radio will automatically select the radio station that is broadcasting on the lowest frequency. To change station press Previous/Next on the front of the unit.
- If there is poor FM signal in the area, extend the telescopic antenna and move until you receive the best reception.

USB/SD card MP3 player:

USB and SD card inputs are located on the top of the subwoofer. To start MP3 player function, please follow these steps:

- Insert USB drive or SD card into the subwoofer into the corresponding socket.
- Press INPUT on the front of the subwoofer or press Mode on the remote control until USB/SD is displayed on LCD display on the front of the subwoofer.
- Unit will read through the files and automatically play the MP3 files within the USB drive or SD card.
- Pressing Play/Pause will pause the song if the unit is playing or start playing if the song is on pause.
- To skip to the next song press NEXT/FORWARD. To fast-forward the song press and hold NEXT/FORWARD
- To play the previous song, press PREVIOUS/REWIND. To rewind the song press and hold PREVIOUS/REWIND.


LINE INPUT (analogue input):

- Press INPUT button until LINE is displayed on the LCD display.
- Use 3.5mm stereo jack to RCA adaptor lead provided, or plug directly into the 2 RCA inputs.
- Press play to play your music.

BLUUTOOTH:

- Press INPUT button until BLUE is displayed on the LCD display.
- Turn the Bluetooth option of your device (PC, smart phone, MP3 etc) ON.
- Perform search on nearby Bluetooth devices and look for "MSD_BT". You may be asked for a password when trying to connect, this is: 0000.
- Once Bluetooth is connected, there will be a "beep" from the speaker to confirm connection.
- If you have difficulty connecting, please refer to your device manual for how to switch on, search and connect to Bluetooth.
- This is a duplex Bluetooth system which means the music playing can be control via the front panel or the provided remote control.
- Pressing Play/Pause will pause the song if the unit is playing or start playing if the song is on pause.
- To skip to the next song press NEXT/FORWARD. To fast-forward the song press and hold NEXT/FORWARD
- To play the previous song, press PREVIOUS/REWIND. To rewind the song press and hold PREVIOUS/REWIND.

REMOTE CONTROL

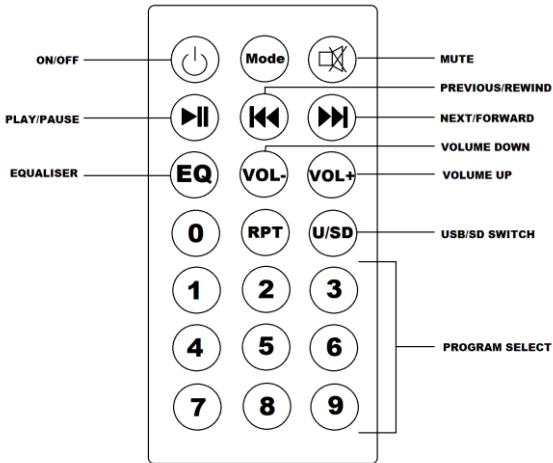

ON/OFF – start up the speaker or set it to stand by.

PLAY/PAUSE – in MP3/Bluetooth mode it will play or pause the music playing. In FM radio mode, it will establish a search for all available channels.

MODE – switch between different input modes.

EQUALISER – select between 4 different types of preset tones “NORMAL”, “ROCK”, “POP” and “JAZZ”.

MUTE – mutes the speakers

PREVIOUS/REWIND – in MP3/Bluetooth mode, press once will jump to previous played song, press and hold will rewind playing song. In FM radio, it moves to next available station with lower frequency.

NEXT/FORWARD – in MP3/Bluetooth mode, press once will jump to next song, press and hold will fast forward playing song. In FM radio, it moves to next available station with higher frequency.

VOLUME UP/DOWN – press vol- to reduce the volume and press vol+ to increase the volume.

USB/SD switch – switch between USB/SD card in MP3 mode.

PROGRAM SELECT – to select different radio channel or MP3.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.
Copyright© 2013. AVSL Group Ltd.*