

KeyBags Size Guide

Stock code	Model	Dimensions	Brand	Models	Brand	Models
127.217UK	KB41 (Micro)	220 x 498 x 64mm	CASIO	GZ5, KS01, LK6, MA150, ML1, ML2, M80/300, SA 1/2/5/6/8/10/11/40, SK60	MIDITECH	MIDI SMART, U-SMART, GARAGE KEY MINI, SA-46 Keys for Kids
			CHORD	MICRO MU	NORD	Nord Lead AIR
			KORG	microKEY 25	YAMAHA	PSS6/9/11/20/50/101/102
			M-AUDIO	Axiom AIR Mini 32		
127.218UK	KB42 (Mini keys)	252 x 684 x 84mm	CASIO	MA100/101.120/130/150/201/220, PA31/81/480, RAP1, SA20/21/35/38/39/45/67/75, SK60/65, TA10, VA10, SA-78 Keys for Kids	MIDITECH	GARAGE KEY, MK49, X-TREME CONTROL, T049, i2 CONTROL 37, MUSIC 25, i2 control 25, Garagekey Mini, i2-Control 61 Pro
			CHORD	MU25	YAMAHA	PSS12/14/15/16/21/26/190/280/290/390/CBX-K1
			M-AUDIO	OZONE, OXYGEN 8, E-KEYS		
127.219UK	KB43 (4 Octave)	320 x 878 x 113mm	ALESIS	QX49, Q49	MIDITECH	MIDI MASTER PLUS, MIDI PLUS, MIDI PRO, MIDI COMPOSER, MIDI START, MIDI STUDIO 2, MIDI CONTROL 2, MC2, MIDISTART MUSIC, MIDISTART-3, groovestation
			CASIO	CA100/110, CT380/395, CTK50/100/120/150/200/230, DM100, MT640, MT740, SA65		
			CHORD	MU49	NORD	Nord Lead A1, Nord Lead 2/3/4, Nord Lead 2X, Nord Lead
			FATAR	STUDIO 49	ROLAND	AX-09 (Black Sparkle), AX-09 (White),
			KORG	PROPHECY, K49, microSTATION, RK-100S KEYTAR	YAMAHA	PSR3/6/8/16/67/74/75/125, PSS31/680/760/780/790/795, CBX-K2
M-AUDIO	AXIOM 49, KEYSTATION 49E, RADIUM 49, OZONIC, OXYGEN 49, Keystation 49es					
127.220UK	KB44 (4/5 Octave)	398 x 973 x 170mm	CASIO	CTK80/230/451/481/491/495/496/519/531/541/551/571/560L/573/591/611/620L/631/651/671/680/691/700/731/800/900/2000/3000/4000/5000, L, K30/35/43/45/50/55/60/65/70/75/90TV/93TV, LK110/220, XW-G1 DJ Synthesiser, XW-P1 Performance Synthesiser	YAMAHA	AN1X, CS1X/2X, DJX, EZAG20/30/150/250i, PSR160/170/172/175/195/202/225GM/206/215/220/225/270/273/275/280/290/292/293/295/340/350/410/420/450/540/630/640/730/740/1000/1500/2000/3000/K1, PSRA300/1000, PSRE203/213/303/313/413, YPT200/300, PSRSAS500, PSRS550, EZ200
			GENERAL MUSIC	CD1/2/3/10/20/30, GK310/330/340/350, WK1/1000	NORD	Nord Electro 4D SW61, Nord Electro 3 Sixtyone, Nord Electro 2 61
			ROLAND	C180, E15/16/28/35.400R, EM10/15/20/25, 150R, EP3/5, JP8000, JV30, JX30, JX3P, SK50, EG101, SH201, VP550, VP550/770	TECHNICS	KC200/211/600/611, KN300/470/500/550/570/650/700/750, MB100
127.221UK	KB44S (4/5 Octave slim)	330 x 939 x 100mm	ALESIS	Vortex Wireless, Vortex	MIDITECH	MK61, PRO 61, MIDI PLUS 61/61U
			CASIO	CTX450, MT750, CTK-240	NOVATION	Launchkey 61
			KORG	X5, X5D	YAMAHA	PSR77/100, DX21, S03/35L
			M-AUDIO	RADIUM 61		
127.222UK	KB45 (5 Octave)	448 x 1060 x 178mm	CASIO	CPS120, CTK560L/620L/631/731/750/1000, CTK-7200, CTK-6200, WK-7600, CTK-4200	ROLAND	E09/09W/100, EM30/50/55/550R, JD800, VA3, V SYNTH, FANTOM X6/G6, EXR400R/460R
			ENSONIQ	TS10, ASR10		
			GENERAL MUSIC	gk 360, gk 380	TECHNICS	KN700/720/770/920/930/1000/1200/1400/1500/1600/2000/2400/2600/3000/3500/5000/6000/6500
			KORG	PA50, KRONOS X (61-Key), KRONOS (61-Key), Pa900, Pa600, Pa600QT, Pa50SD, Pa300	YAMAHA	CS6X, E56, PSR1100/2100/4000/7000/8000, MO6, MOTIV6, MOTIV S30, SY77/85, TYROS, PSRS900/700, MOXF6, MOTIF XF6, PSR-S650, PSR-S650, PSR-S750, PSR-S950, PSR-A2000, PSR-E443, PSR-E433, EZ-220, PSR-E433, PSR-E443, YPT-220
			KURZWELL	PC3K6, PC3LE6, PC3LE6		
			M-AUDIO	Axiom AIR 61		
127.223UK	KB45S (5 Octave slim)	356 x 1060 x 132mm	CASIO	CT450/460/625/6000, HT3000/6000, VZ1, CTK-2200, CTK-3200, CTK-1100, LK-120 Key Lighting keyboard	ROLAND	E09/12/14/20/26/38/50/66/68/300, EXR3/35/55/55/75/40R, FANTOM S/X6/XA, GW7/8, JUNO-DG, JV35/50/80/180, JW50, JX1/305, R55/50/70, P10/30/50/60, PRELUDE, JUNO-Gi, JUNO-Di, JUNO-Di (White), FA-06, V-Combo VR-09
			CHORD	MU61		
			KORG	TRITON LE61, i5s5, X3, M1, 01W, T3, T3EX, WS, WAVESTATION ES, NS, TRITON, TR6/76, KROME-61, KR0SS-61, KingKORG	TECHNICS	KN501/600/701/800/901/WSA1
			M-AUDIO	Axiom Pro 61	YAMAHA	DSR500/1000/2000/3000, DX7, PSR28, V50, MX61
			NOVATION	Impulse 61		
127.224UK	KB46 (5/6 Octave slim)	430 x 1175 x 200mm	GENERAL MUSIC	WK2/3/4/6/B/500, WK2000/2000HD/2000SE, WS2, WX2, EQUINOX 61, PRP8, GENESYS, GENESYS PRO, GENESYS S, VERSI - IKARUS	YAMAHA	DGX200/202/230/300/305/203, PSR6000/9000, QS300, W7, YPP50/100, EX7, TYROS, TYROS 2, YFP70, Tyros5-61
			CASIO	CK30, CTK711EX/811EX, HTX10/50, LK73/80, MZ200, WK1200/1300/1350	ROLAND	E56/70/86/96/500/600, EM2000, EP75/76/760, G600, KR33/55, RD200, V SYNTH GT
			KETRON	KETRON X1, XD9, SD1, SDS, VEGA, AUDYA	TECHNICS	KN7000
			KORG	CX3, i540/50, PA1X/60/80/8000, TRITON STUDIO 61, SV-1-73 Black		
127.225UK	KB46S (5/6 Octave slim)	350 x 1180 x 150mm	CASIO	CPS7, CTK930, WK1500	NORD	(Nord Electro 4 SW73, Nord Electro 4 HP, Nord Stage 2 HA76, Nord Stage 2 SW73, Nord Stage EX (Keys-76), Nord Stage EX (Keys-73), Nord Electro 3 Seventythree, Nord Electro 3 HP, Nord Stage Classic 73/76, Nord Electro 2 73)
			KORG	i3, i30, TRINITY, TRINITY PLUS, TRINITY V3, iX300, N364, Z1, TRITON EXTREME 61		
			KURZWELL	SP4-7	ROLAND	EP7/77, EP7-LLE, VK7/8, RD-64, AX-Synth (Black Sparkle), AX-Synth (White), VK-8
127.226UK	KB47 (6.25 Octave)	472 x 1267 x 190mm	CASIO	CP550S/700/720, WK1600/1630/1800/3000/3200/3500/3700	ROLAND	DISCOVER 5, E60/80, G800/1000, EXR7, FA76, FANTOM, FANTOM X7, KR100/500, RD250, VAS/7/76, JUNO DM/STAGE, JUPITER-80 Version 2, JUPITER-50, V-Combo VR-700
			ENSONIQ	KS32, SQ2		
			KORG	KRONOS X (73-Key), KRONOS (73-Key)	TECHNICS	PR100/110
			GENERAL MUSIC	PROMEGA, PROMEGA 2, SK76/760, WK1600/1800, GENESIS PRO, Genesis S, Genesis PRO S	YAMAHA	CLP152S, DGX20S/EXS, PDP100, MOTIV7, PSR2500/3500/4500/4600/6700/9000PRO/PSRGX76, MOTIV EX5, SY99, YPP45/55, YPR50, TYROS2/3, NP30/30S
127.227UK	KB47S (6.25 Octave slim)	370 x 1267 x 116mm	GENERAL MUSIC	S3, SX3	ROLAND	A30/33/37/50/70, D70, JV90/1000, XP80
			KETRO	GP1	YAMAHA	NP-31, NP-V80, NP-V60
			KORG	TRITON PRO, 01 WPRO, TRITON LE76, KROME-73		
127.228UK	KB48 (7.25 Octave)	490 x 1385 x 190mm	CASIO	AP21/24/33/38/45/80R, CPS80S/85, PX400R, PRIVIA PX120/320, CDP100/200R	ROLAND	EP9E/85/97, FP1/4/8/9, G7/70, KR350/650, KF7/90, MP500BW, RD600, VR760, E80, EP880, FP-50 (Black), FP-50 (White), FP-80 (Black), FP-80 (White)
			GENERAL MUSIC	PRO2, POMECA 3, SK88/880, RPBASIC, RP8/15, EQUINOX 76, Promega 2		
			KAWAI	CN270, ESS	TECHNICS	PC8/12/25/26, PX201M
			KORG	C3200/6500, EC120/150/350, 5GPROX, SG1D, SP250, N1, TRITON STUDIO 76, PA1X PRO, SV-1-88 Black	YAMAHA	CLP80/153S, DGX500/505, PFP100, PFB5, P150/200/250/300, PDP400, MO8, S80/90, S08, WS, YDP113/123/223, YPP200, MOX8, MOXF8, MOTIF XF7, P-255, P-155, CP4 STAGE, CP40 STAGE, CPS, Tyros5-76
KURZWELL	SPSS4-8					
127.229UK	KB48S (7.25 Octave slim)	380 x 1330 x 150mm	CASIO	PL40R, PS20, PX100/110LB/110DK/300/300L/310/500L/700	NORD	Nord Stage 2 HA88, Nord Stage Classic 88
			FATAR	SL990, STUDIO 900, STU2001, STU90+, STUDIO LOGIC 880	ROLAND	A80, F30/30E/50/90/100, FP2/3/5, RD100/150/170
			KAWAI	CL20, ES4, SLB110, ES1/3, L1, MP4	TECHNICS	P30/50, SP30
			KORG	i2, X2, TRINITY PRO, TRINITY V3 PRO, N264, SP100/200/300/500, PA1X PRO, TRITON EXTREME 76	YAMAHA	P60/60S/70/70S/80/90/120/120S/140/140S