



MX3 BT LED Party Tube

Ref. nr.: 130.121



INSTRUCTION MANUAL

V1.1

ENGLISH

Congratulations to the purchase of this Max product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing becomes very hot. Do not touch it during operation and immediately after.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Secure the product with an extra safety chain if the unit is ceiling mount. Use a truss system with clamps. Make sure nobody stands in the mounting area. Mount the effect at least 50cm away from inflammable material and leave at least 1 meter space on every side to ensure sufficient cooling.
- This product contains high intensity LEDs. Do not look into the LED light to prevent damage to your eyes.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.



DO NOT LOOK DIRECTLY INTO THE LENS. This can damage your eyes. Persons who are subject to epileptic attacks should be aware of the effects that this light effect may have on them.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

OPERATION GUIDE:



: Pause/ play the music; Led light switch.



: answer/ end a phone call.



: Long press to power on/off; Short press to switch BT/ Micro SD card / USB / Line in mode when in different model; Long press to close the display light.

Note: all together 2 flashing modes, long press for changing each flashing mode, then turn off the light.



:long press for "Volume up" ,short press for " next song"



:long press for "Volume down" , short press " for last song"

BT MODE

Turn on the device, and LED will flash rapidly and will try pairing.


Follow the operating instructions for BT connection on your device and allow searching BT speaker.

Usually this is done by going to "set up "menu, connect for "BT" function and then selecting the option to search for BT devices.

Your device (mobile phone, PC, tablet,. etc.) will detect the BT speaker and ask if you wish to connect with the speaker. Press "Yes" or "confirm" to confirm this action.

 
if your phone requires a password or a PIN number, enter 0000 and confirm it.

After connection, you can adjust volume and select last/next song by pressing  and .If you want to get


the coming phone call, short press  , then you can make phone call by the speaker. Press again to end the phone call. And the speaker will recover playing music if audio source don't be stopped. (support in MP)

MUSIC PLAY MODE

 


 
Short press in 5 seconds , the system will enter music playing after insert the Micro SD card before switching modes, otherwise it will not notice the "Music mode". it will be played music from TF card from 128MB to



32GB. Short press in 1 second  to pause the music; press it again, to restore music playing.

USB PLAYBACK MODE



 
Short press in 5 seconds , the system will remind" USB mode' after insert the USB flash disk before switching modes, otherwise it will not notice the "USB mode". it will be played music from USB flash disk from



 
128MB to 32GB. Short press in 1 second  to pause the music ; press it again, to restore music playing.

AUX-INPUT MODE

To connect with the speaker by Aux in cable to PC ,Mobile or other audio source by Line in cable .And the system will remind "AUX input mode" then audio signal can be played by the speaker from external audio resource. Short




press in 5 seconds  switch to other modes



During the Line in mode, long press /  for volume up/down.

LED LIGHT




Long press  in 5 seconds, the LED light will change flashing mode, four colors light switch; Long press again, four colors light on.

CHARGING

Charge the speaker in "OFF" mode through the micro USB cable from a computer or through a DC adaptor.



Status LED Indication  will be red, when charge full, the light will be off

If charge that in "ON" mode through the USB cable from a computer or through a DC adaptor, the LED with colourful will flash all the time.

INDICATOR LIGHT



The indicator will work as follow, when:

Blue LED flashing : Speaker is in BT mode

Blue LED flashing rapidly: BT is pairing

Blue LED keep on : BT connected

Blue LED flashing slow: Music play by Micro SD;

Blue LED keep on: Music play is paused

Blue led keep on: Line in Mode

Red LED on: connected to speaker through USB charge cable

Red LED off: the speaker is charged full

TECHNICAL SPECIFICATION

Voltage	: DC 5Volt
Speaker power	: 2x3Watt
Battery	: 1200mAh
Inputs	: BT, TF, USB, Line In 3.5mm Jack
Dimensions per unit	: 205 x 65 x 62mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.



tronios
Sound & Light

CE Declaration of Conformity

Manufacturer: TRONIOS BV
Bedrijvenpark Twente 415
7602 KM – ALMELO
+31(0)546589299
+31(0)546589298
The Netherlands

Product number: 130.121

Product Description: MX3 BT LED Party Tube

Trade Name: MAX

Regulatory Requirement: EN 55013:2013
EN 55020:2007+A11:2011

I hereby declare that the product meets the requirements stated in Directives 2014/35/EU and 2014/30/EU and conforms to the above mentioned Declarations.

Almelo,

22-02-2017

Name : *M. Velders*

Signature :

Specifications and design are subject to change without prior notice..

www.tronios.com

Copyright © 2017 by TRONIOS the Netherlands