

QTFX-V1

Smoke Machine User Manual

160.456UK

Version 1.1

WWW.QTXLIGHT.CO.UK

Copyright protected by QTX Light

QTFX-V1 Smoke Machine - For indoor use only



Caution! Please read this manual carefully before operating! Damage caused by misuse is not covered by the warranty!

1. General Introduction:

This unique smoke machine is the first of its kind in that it can be operated horizontally, vertically or hung upside down from trussing. With a 1300W heater and high-pressured pump, it can produce around 20,000 Cu Ft (566m³) of smoke per minute and project up to a height of 5m. It can be operated by the wireless remote or by a single channel on DMX. As with other QTFX smoke machines, this unit features MIRROR piping patent technology to reduce the rate of jamming, and the special microcomputer control system maintains a high temperature allowing the unit to run efficiently for long periods of time.

Features:


- Can be operated horizontally or vertically
- Mounted points for hanging from trussing upside down (please follow instructions)
- Conveniently placed carry handle
- Operated by wireless remote control
- 1 channel DMX
- Master & Slave mode
- Large tank capacity 2.5 litres
- Anti-jamming pipe technology



ffects Fluid Chart

Suitable for use with

All makers on machines:

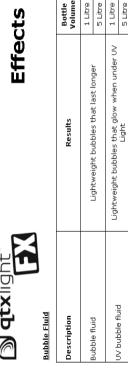

Description	Results	Volume	Reference	
T ::	20 2 2 2 0 1 4 1 4 1 4 4 4 1 2 1 4 4 4 4 5 1 5 2 2 3 4 4 4 5 1 5 1 5 1 5 1 5 1 5 1 5 1 5 1 5	1 Litre	1 Litre 160.574UK	
	בומו וראפומוור במחחופה מופר ופזר וחוומפו	5 Litre	160.575UK	
T:::0	w when under UV	1 Litre	1 Litre 160.576UK	_
	Light	5 Litre	5 Litre 160.577UK	
Snow Fluid				
Description	Results	Bottle	Item	

	- 4491111 5551 555 1	TOT USE WILLI:
	Item	Reference
	Bottle	Volume
		ity Stability Colour of Fog
	Results	Stability
	N.	Su
		Dispersion D
	Fluid	Colour
Smoke Fluid	Documention	Describani

FX Snow machine 160.568UK er makers of snow machines

Suitable for use with:

Doctouintion			•			amng	mant	.4	_
Describanii	Colour	Dispersion	Density	Stability	Colour Dispersion Density Stability Colour of Fog Volume	Volume	Reference	TOT USE WILLI:	
T:: 19 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	2010>	ò	+4 C:-	-	(±1476)	1 Litre	160.643UK	VII OBE OBE CONTRACT OF THOSE OF THOSE	
orgingal a sillone light	B D			= 2		5 Litre	160.582UK	160.543UK 160.449UK 160.428UK 160.429UK	
10 mm	0		on ipopy	POOD	○#:41#1	1 Litre	160.587UK	1 Litre 160,587UK 160,430UK and for all makers of smoke machines.	
nigii giade siiloke iidid	9	š 0 0				5 Litre	160.588UK	(ior best results use any machine up to 900W)	
Time Colombia	jaja	300	100	0000	4	1 Litre	160.644UK		٠,
nigii quality silloke lidid	¥ L	B 0	5	n000		5 Litre	160.583UK	160.437UK 160.446UK and for all other makers of smoke machines. (For the best best results use	-
Premium smoke fluid	Clear		V. High	V. Good	Slow V. High V. Good V. deep white 5 Litre 160.589UK	5 Litre	160.589UK	with machines between 1000 - 5000W)	
	ō		176 - 6			100			

Dipli		œ	Results		Bottle	Item	44000
Colour	Dispersion		Density Stability	ty Colour of Fog	Volume	Reference	roi use with:
Ping send sellens doil	0	i i	pood	0 0 0 0 0	1 Litre	160.590UK	- 7
	8000	5	0000		5 Litre	160.591UK	100.4340N and any other maker or neater type Haze Machines

2

14. Technical specification:

Power supply	230Vac, 50Hz	
Fuse	F7A	
Power	1300W	
Re-heat time	4 min (approx)	
Smoke Output	20,000 Cu Ft (1,132m³)	
Tank capacity	2.5 Litres	
Dimensions	341 x 345 x 194mm	
Weight	7.8kg	

160.456UK

14

15. Disposal :

Please disposal of the unserviceable device according to the current statutory requirements.

2. Package Contents:

Please check the contents to ensure that the product has been received in good condition.

QTFX-V1 Smoke Machine x 1pcs	User's Guide x 1pcs
Power Cord x 1pcs	Wireless remote control x 1pcs

If you find any accessory is missing or the machine has arrived with any problems, please contact your local dealer at once. Do not try to fix this item yourself or you will lose the warranty. Please keep the original package and invoice for any possible replacement or returned demand.

3. Recommended Fluid:

For the QTFX-V1 smoke machine we strongly recommend the following fluids which have been specifically formulated to perform best in any smoke machines with a power rating between 1000 - 3000W.

QTX Ref	Description	Size	Results
160.644UK	High quality smoke fluid	1L	High quality ultra
160.583UK	High quality smoke fluid	5L	fine mist
160.589UK	Premium smoke fluid	5L	Premium mist
160.594UK	Vanour blact fluid	1L	CO2 Blast type
160.595UK	Vapour blast fluid	5L	effect







4. Setup:

- Unpack the fog machine
- 2. Unscrew the top cap of the tank and remove to fill with the recommended smoke fluid
- Replace the bottle and screw the cap securely ensuring the pipe is fed down to the bottom of the bottle so a consistent flow of fluid is supplied to the machine
- 4. Connect the remote control
- 5. Connect the IEC mains plug and power up
- 6. Heat up time is usually around 4 minutes. Please ensure no button is pressed during the heat up time. When the machine is ready the word "HEAT" will disappear from the control display.
- 7. Press the button on the remote control for 5 seconds so the fluid has a chance to flow through the heater block making it ready to use...
- After this you will be able to use the smoke machine. It is recommended to produce smoke with small pauses in between so that the temperature is maintained and the thermostat doesn't switch off.

3) Once released turn the machine round again and fit the bottle panel on the top side securely.

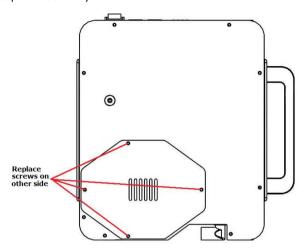

4) Turn the machine upside down again and fit the bottle securing the bottle lock. Fit your G Clamps in the highlighted M8 screw sockets.

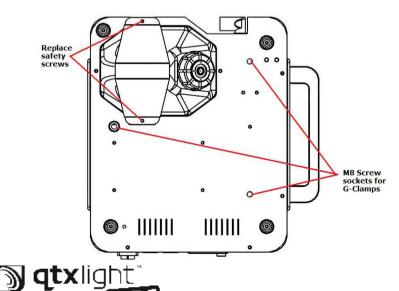





12

16. How to mount to trussing:

1) Remove the bottle from the machine.

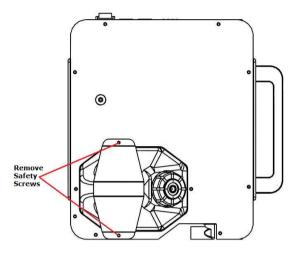

2) Turn the machine upside down and remove the 4 highlighted screws to release the bottle panel.

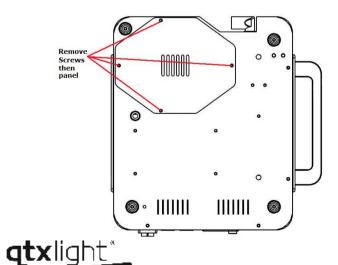

5. Mounting instruction:

The fixture may be mounted in any position provided there is adequate room for ventilation and the fluid can not leak.

It is important never to obstruct the front of the machine, fan or vents pathway. Mount the fixture using a clamp.

Adjust angle of the fixture loosening both knobs and tilting the fixture. After finding desired position, re-tighten both knobs.

When selecting installation location, take into consideration refilling the tank and routine maintenance. Safety cables must always be used.

Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperatures changes or restricted ventilation. Also do not mount so vertically over people as occasionally condensation builds up and the fluid can be quite hot.

6. Caution! To prevent Mortal Electrical Risk and Long Life Operation:

For your safety, please kindly pay attention to all of the warnings listed below:

- Always plug in the power plug last and disconnect from the mains when the device is not in use or before cleaning.
- Do not install and operate the device in rain or extreme heat, moisture or dusty environments.
- This device is for indoor use only and in a dry environment.
- Do not switch on immediately but wait until it reaches to room temperature if the device has been exposed to drastic temperature fluctuations.
- Do not shake the device and avoid brute force when installing or operating.



- Do not use the device during thunderstorms and please disconnect the power.
- Do not use solvents or aggressive detergent to clean the device. Use a soft and clean cloth.
- Do not modify the device or the connected power cord without authorization.
- Use appropriate safety-rope for safety.
- Clean the machine regularly using water or smoke cleaning fluid (160.670).

7. Connect with power supply - The ground wire must be connected:

Use the plug to connect to the main power supply as following.

Wire	Connection	International signal
Brown	Live	L
Blue	Neutral	N
Yellow /Green	Earth	

8. Quick Trouble Shooting:

If the unit is not functioning properly

- 8.1 Check if main power is on and fuse hasn't blown
- 8.2 The remote control is plugged in correctly in to the socket
- 8.3 Check there is fluid in the tank
- 8.4 Check that the pipe is pushed down to the bottom of the tank
- 8.5 Check the correct fluid has been used.
- 8.6 If there is a block use distilled water or smoke machine cleaning fluid.



14. Control Display:

8888

0000

MENU: Press to access the menu functions

UP: Scroll up through the options

DOWN: Scroll down through the options

ENTER: Confirm a selection

Display	Description
	The smoke machine is warming up. This usually happens
HEAT	when the unit is first turned on or is re-heating.
Addr	Set the DMX Address 000 - 512
rEno	Turns the wireless remote on or off
orL	Turns the fluid level sensor on or off

15. DMX Operation:

DMX channel	DMX Scale	Detail function
CH 1	000 - 005	0% Output
CH 1	006 - 255	100% Output




13. Wireless Remote Control:



Press the ON button to turn on the continuous out put from the smoke machine and the OFF button to stop all output.

If the remote is not working then you may need to pair the wireless controller with the smoke machine.

Ensure the wireless remote mode is turned on (see next section) Turn on the machine and the LCD display will show as below.

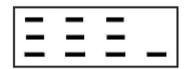

During this time press and hold any button on the wireless controller until the display flashes twice to indicate a match. (Note this can take up to 12 seconds)

Once this has been done the wireless remote frequency will be stored and there will be no need to do this again.

9. Replacing Fuse:

Disconnect from the main power supply first, then remove the fuse holder above the IEC Socket to reveal the fuse. Replace the correct fuse rating as stated on lighting or user guide. Then, lock the fuse holder cover back into place.

10. General Maintenance:

To maintain optimum performance and minimize wear, the item should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned after use to avoid dust build-up and blockages, which can result in poor performances, overheating and breakages. Be sure to power off the fixture before conducting maintenance.


Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean the external case when the fixture is cold with a dry cloth or tissue, and drag dirt and grime to the outside case.

To ensure a continuing high performance it is recommended to use water or smoke cleaning fluid (160.670) to clean the internal workings. Simply empty the tank of any smoke fluid. Fill with water or smoke cleaning fluid then operate two full cycles to clean the internal pipes this should be done once every 2 months to ensure continuing high performance





11. Layout:

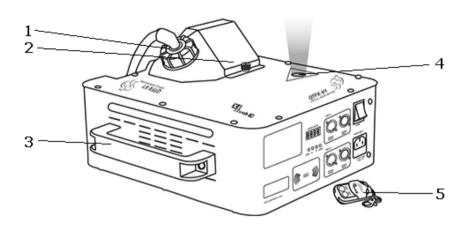


160.456UK

8

- 1) 2.5l Storage Bottle
- 2) Bottle safety lock
- 3) Carry Handel
- 4) Smoke Output
- 5) Wireless remote

12. Rear Layout:

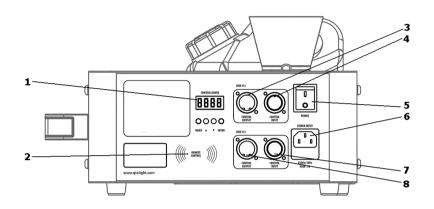

- 1) LED Display
- 2) Built in wireless receiver
- 3) DMX OUT (3 Pin)
- 4) DMX IN (3 Pin)
- 6) Power ON/OFF
- 6) IEC Power Input
- 7) DMX OUT (5 Pin)
- 8) DMX IN (5 Pin)



