

QTFX-2000

Smoke Machine User Manual

160.457UK

QTFX-2000 Smoke Machine – For indoor use only

Caution! Please read this manual carefully before operating! Damage caused by misuse is not covered by the warranty!

1. General Introduction :

This high-powered smoke machine can produce up to 40,000 Cu Ft (1132m³) of smoke per minute. It can be operated by either a built-in timer, the wireless remote or 1 channel DMX, making it ideal for large nightclubs, stages and amusement parks. The unit can run efficiently for extended periods of time due to the special microcomputer temperature control, whilst the MIRROR piping patent technology vastly reduces the rate of jamming. The unit holds a standard euro 5l bottle of smoke fluid so there is no need to refill a tank, allowing for easy cleaning and no mess.

Features :

- High pressure pump for large output in short space of time
- 40,000 Cu Ft (1,132m³) per minute
- Easy load 5L bottle slot with screw cap for less mess
- Anti jamming pipe technology
- Intelligent microcomputer keeps the temperature high
- Illuminated tank to show when the machine is ready
- I Channel DMX
- Built in time or wireless remote operation



Copyright Protected by QTX Light



2. Package Contents :

Please check the contents to ensure that the product has been received in good condition.

QTFX-2000 Smoke Machine x 1pcs	User's Guide x 1pcs
Power Cord x 1pcs	Wireless remote control x 1pcs

If you find any accessory is missing or the machine has arrived with any problems, please contact your local dealer at once. Do not try to fix this item yourself or you will lose the warranty. Please keep the original package and invoice for any possible replacement or returned demand.

3. Recommended Fluid:

For the QTFX-2000 smoke machine we strongly recommend the following fluids which have been specifically formulated to perform best in any smoke machines with a power rating between 1000 – 3000W.

QTX Ref Code	Description	Size	Results
160.644UK	High quality smoke fluid	1 Litre	High quality ultra
160.583UK	High quality smoke fluid	5 Litre	fine mist
160.589UK	Premium smoke fluid	5 Litre	Premium mist



14

Setup : 4.

- Unpack the fog machine 1.
- 2. Unscrew the top cap of the tank and remove to fill with the recommended smoke fluid or place a standard 5L bottle of fluid into the dedicated location and screw the top cap on.
- 3. Ensure the pipe is fed down to the bottom of the bottle so a consistent flow of fluid is supplied to the machine
- Connect the wireless remote control 4.
- 5. Connect the IEC mains plug and power up
- 6. Heat up time is usually between 4-8 minutes. Please ensure no button is pressed during the heat up time. When the machine is ready the LED light on the remote control will illuminate
- Press the button on the remote control for 5 seconds so the fluid has 7. a chance to flow through the heater block making it ready to use..
- 8. After this you will be able to use the smoke machine. It is recommended to produce smoke with small pauses in between so that the temperature is maintained and the thermostat doesn't switch off.



<u>Bubble Fluid</u>

Chart **Effects Fluid**

Description			Rı	Results		Bottle Volume	Item Reference	Suitable for use with
build fluid		ntdini 1	dud tehniou	-1 +- 41 1-	the lood of the	1 Litre	160.574UK	
מתמופ וומות		בוקרורא	בוקתונאפוקרור ממסמפג נחפר ופגר וטתקפי	מופא תופר ופ	ist iuriger	5 Litre	160.575UK	All makers of bubble machines: QTX LIGHT FX
1011년 11년 11년 11년 11년 11년 11년 11년 11년 11		Lightweigh	t bubbles t	that glow v	Lightweight bubbles that glow when under UV	1 Litre	160.576UK	Πααπηες: του.σοζόν του.σύζον του.σύτον 160.570UK
				Light		5 Litre	160.577UK	
Snow Fluid								
Description			2 2	Results		Bottle Volume	Item Reference	Suitable for use with:
		High quality	y snow last	ts 30% Ion	High quality snow lasts 30% longer than other	1 Litre	160.578UK	QTX LIGHT FX Snow machine 160.568UK and all
STIUW FIUIU			stand	standard fluids		5 Litre	160.579UK	other makers of snow machines
<u>Smoke Fluid</u>								
Description	Fluid		R	Results		Bottle	Item	Tau
IInndursan	Colour	Dispersion	Density	Stability	Dispersion Density Stability Colour of Fog	Volume	Reference	
Ctractical conclusion	mollox	-doin O			t é de ite	1 Litre	160.643UK	VI. 1011 10 10000000000000000000000000000
סרפוומפומ אוווטגפ וומומ		Suick	בוקוור	LU W	MIIICE	5 Litre	160.582UK	160.543UK 160.449UK 160.428UK 160.429UK
						1 Litre	160.587UK	160.430UK and for all makers of smoke machines.
High grade smoke huid Orange	orange	MOIS	Medium	2000	AVLICE	5 Litre	160.588UK	(ior dest results use any machine up to 900%)

All smoke machines		Lou		QTX LIGHT FX Haze machines; 160.451UK	100.+0+00 and any other maker of meader cype Haze Machines		
20ml 160.670UK		Item	Reference	1 Litre 160.590UK	160.591UK		
20ml		Bottle	Volume	1 Litre	5 Litre		
e machine			Colour Dispersion Density Stability Colour of Fog Volume	Doon white			
Longer life from your smoke machine		Results	Results	Results	Stability	Pood	0000
r life from (æ	Density	Linb
Longe			Dispersion	clow	M 010		
Clear		Fluid	Colour	se olo	0		
Smoke machine cleaner	<u>Haze</u>	Docemination	linndunsari	Constraints and the second sec	חוקוו קעמוונץ וומבפ וועוע		

Ъ

.455UK makers -

s: 160.4 other 7

white

Deep 1

Good

Slow

Pink

smoke fluid

quality

High

figh High



15. Technical specification :

Power supply	230Vac, 50Hz
Fuse	F7A
Power	1800W
Re-heat time	8 min (approx)
Smoke Output	40,000 Cu Ft (1,132m³)
Tank capacity	5 Litres
Dimensions	300 x 280 x 525mm
Weight	16.6kg

16. Disposal :

Ŕ

 $^{\circ}$ Please disposal of the unserviceable device according to the current

statutory requirements.

5. Mounting instruction :

The fixture may be mounted in any position provided there is adequate room for ventilation and the fluid can not leak.

It is important never to obstruct the front of the machine, fan or vents pathway. Mount the fixture using a clamp.

Adjust angle of the fixture loosening both knobs and tilting the fixture. After finding desired position, re-tighten both knobs.

When selecting installation location, take into consideration refilling the tank and routine maintenance. Safety cables must always be used.

Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperatures changes or restricted ventilation.

6. Caution! To prevent Mortal Electrical Risk and Long Life Operation :

For your safety, please kindly pay attention to all of the warnings listed below:

- Always plug in the power plug last and disconnect from the mains when the device is not in use or before cleaning.
- Do not install and operate the device in rain or extreme heat, moisture or dusty environments.
- This device is for indoor use only and in a dry environment.
- Do not switch on immediately but wait until it reaches to room temperature if the device has been exposed to drastic temperature fluctuations.
- Do not shake the device and avoid brute force when installing or operating
- Do not use the device during thunderstorms and please disconnect the power.



- Do not use solvents or aggressive detergent to clean the device. Use a soft and clean cloth.
- Do not modify the device or the connected power cord without authorization.
- Use appropriate safety-rope for safety.
- Clean the machine regularly using water or smoke cleaning fluid (160.670)

7. Connect with power supply - The ground wire must be connected :

Use the plug to connect to the main power supply as following.

Wire	Connection	International signal
Brown	Live	L
Blue	Neutral	Ν
Yellow /Green	Earth	

8. Quick Trouble Shooting :

If the unit is not functioning properly

 
- 8.1 Check if main power is on and fuse hasn't blown
- 8.2 The remote control is plugged in correctly in to the socket
- 8.3 Check there is fluid in the tank
- 8.4 Check that the pipe is pushed down to the bottom of the tank
- 8.5 Check the correct fluid has been used.
- 8.6 If there is a block use distilled water or smoke machine cleaning fluid.

User Manual – QTFX-2000

14. DMX controlling:

DMX channel	DMX Scale	Detail function		
CH 1	000 - 005	0% Output		
	006 - 255	5% - 100% Output		

Dip Switch addressing



To set the DMX address please see the example table below and for more details visit the QTX website www.qtxlight.com


(Note: 1 = On, 0 = Off)

DMX	DIP Switches								
Address	1	2	4	8	16	32	64	128	256
1	1	0	0	0	0	0	0	0	0
2	0	1	0	0	0	0	0	0	0
3	1	1	0	0	0	0	0	0	0
410	0	1	0	1	1	0	0	1	1





13. Timer Controller :

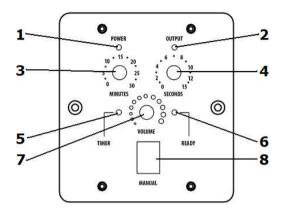

- 1) Power indicator LED
- 2) Output indicator LED
- 3) Set time interval between output (Zero = Timer off)
- 4) Set the duration the smoke is released for.
- 5) Timer activated indicator (flashing)
- 6) Smoke machine at temperature and ready to operate LED
- 7) Output smoke volume
- 8) Manual override button

9. Replacing Fuse :

Disconnect from the main power supply first, then remove the fuse holder above the IEC Socket to reveal the fuse. Replace the correct fuse rating as stated on lighting or user guide. Then, lock the fuse holder cover back into place.

10. General Maintenance :

To maintain optimum performance and minimize wear, the item should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned after use to avoid dust build-up and blockages, which can result in poor performances, overheating and breakages. Be sure to power off fixture before conducting maintenance.

Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean the external case when the fixture is cold with a dry cloth or tissue, and drag dirt and grime to the outside case.


To ensure a continuing high performance it is recommended to use water or smoke cleaning fluid (160.670) to clean the internal workings. Simply empty the tank of any smoke fluid. Fill with water or smoke cleaning fluid then operate two full cycles to clean the internal pipes this should be done once every 2 months to ensure continuing high performance






160.457UK

11. Layout :

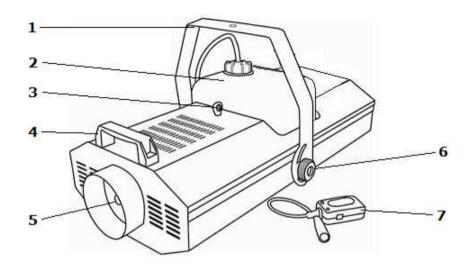

- 1) Mounting Bracket
- 2) 5L Bottle slot
- 3) Safety Loop
- 4) Carry handle
- 5) Smoke output
- 6) Thumb screws
- 7) Wireless remote system

12. Rear Layout :

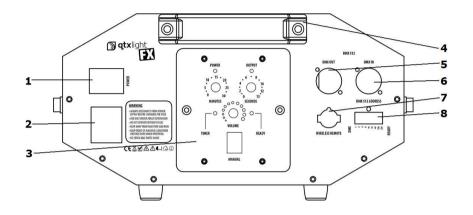

- 1) Power ON/OFF
- 2) IEC Power IN
- 3) Timer Control (see next section)
- 4) Rear carry handle
- 5) DMX OUT
- 6) DMX IN
- 7) Wireless remote connection
- 8) Set DMX address (see Section 14)



