

Ref. No.: 150.523

MHL-1410WISPOT 14X 10W QUAD DMX 2.4GHZ



MANUAL



Thank you for purchasing one of our products.

Before you use this product please read these instructions carefully to enjoy optimal performance and a longer service life.

CONTENTS

Contents	3
Unpacking Inspections	4
Unpacking instructions	4
Checking the contents of the box:	4
Safety Instructions	5
Product Overview	5
Functions Introductions	5
Main Functions	5
System menu	ô
System setting	7
Channel mode	7
DMX Address	7
System Reset	7
Firmware Version	7
Fixture Time	7
White Balance	7
Auto Test	7
Pan invert	7
Backlight LCD	8
Show mode	8
Slave mode	8
Wireless DMX	8
Operating Instructions	8
DMX Channel settings	9
12 Channel settings:	9
9 Channel settings:	9
Maintenance1	0
Specification1	0




UNPACKING INSPECTIONS

Unpacking instructions

- Please unpack the carton and check the goods carefully when you receive it, if you discover
 any packing damage, shortage or quality problems, please notify the shipper and reject the
 goods.
- Before using this product, please read the instructions carefully and store them in a safe place for future reference.

Checking the contents of the box:

The product, Power cord, Instruction Manual, Mounting Bracket

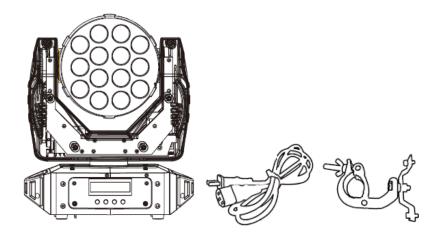




SAFETY INSTRUCTIONS

- Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Never put tiny metal objects such as a screwdriver, iron wire, etc. into this product in case of a short circuit.
- Please make sure that the voltage of the outlet to which you are connecting this product is within the range stated on the decal or rear panel of the product.
- Avoid physical damage to the product during transportation. Never carry this product from the power cord or any moving part . Always use the hanging / mounting bracket or the handles.
- This product is for indoor use only. To avoid risk of fire or shock, do not expose this product to rain or moisture.
- Never pull or tug on the cord and change it for another one, stop using it when it is damaged or becomes hot.
- Stop using the product once there are sparks when connecting it to the power socket.
- Do not operate this product with wet hands and never place it near water or any other liquids.
- Make sure there are no flammable materials close to the unit while operating. Always install it
 in a location with adequate ventilation.
- When the original lightning source is damaged, do not replace it with a lightning source which has different specifications and ratings.
- Always disconnect this product from the power source before replacing the light source or the fuse.
- The maximum ambient temperature is 40°C(104°F).
- Never clean the unit with water, thinner or any other dissolving agent .
- Stop using the product in case of a serious operating problem and send it to our maintenance agent immediately. Never get this product repaired by non-professional workers.
- Avoid direct eye exposure to the light source while this product is on.

PRODUCT OVERVIEW

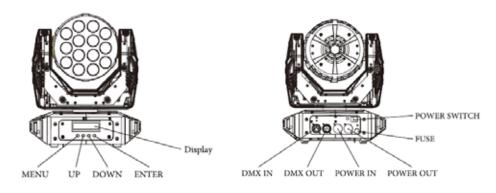


FUNCTIONS INTRODUCTIONS

Main Functions

- 9 or 12 DMX channels .
- Sound active, (wireless) DMX, master/slave mode .
- 14x 10W high quality CREE LEDs.
- With static colors, strobe, dimmer, color mixing and changing effects.
- Pan/Tilt inversion
- Electronic dimming 0 100%



SYSTEM MENU

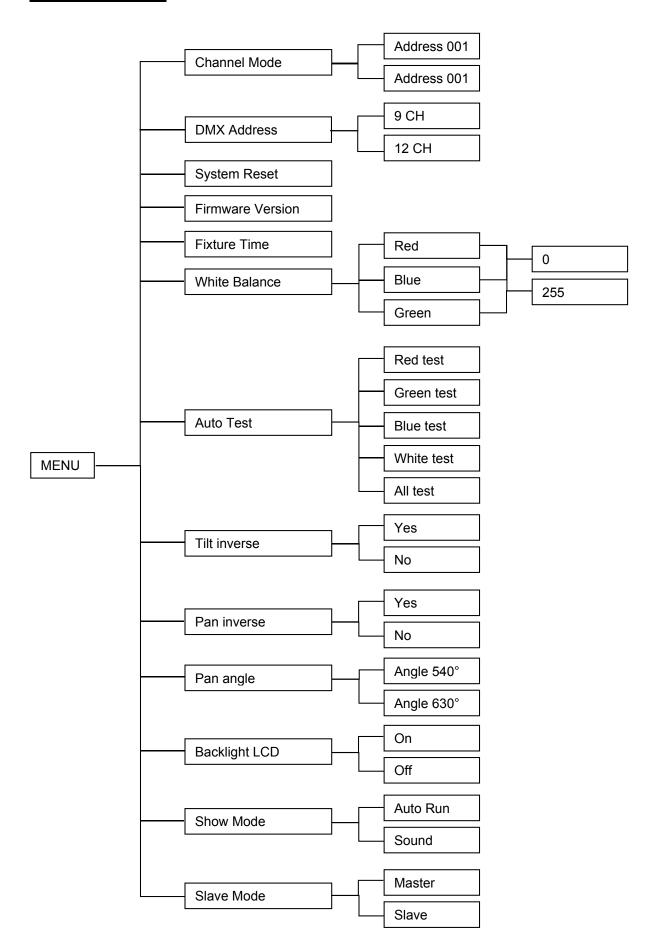



SYSTEM SETTING

Channel mode

Select the desired channel mode

Press the UP or DOWN button until "Channel mode" is displayed, press enter.

"X Ch" will now be displayed, ("X" represents the displayed channel mode). Press the UP or DOWN button to find the desired channel mode. Press ENTER to confirm.

DMX Address

Set the DMX address

Press the UP or DOWN button until "DMX address" is displayed, press ENTER.

"X" will now be displayed, ("X" represents the displayed address). Press the UP or DOWN button to find the desired address. Press ENTER to confirm

System Reset

Use this function to reset the fixture

Press the UP or DOWN button until "System Reset" is displayed, press ENTER.

The fixture will reset now

Firmware Version

This will display the software version

Press the UP or DOWN button until "Firmware Version" is displayed, press ENTER.

Fixture Time

With this function you can display the running time of the fixture

Press the UP or DOWN button until "Fixture Time" is displayed, press ENTER.

White Balance

This menu will let you select your white balance mode

Press the UP or DOWN button until "White Balance" is displayed, press ENTER.

 $\hbox{Press ENTER to display the Red, Green, Blue and then press ENTER. The RXXX, GXXXX, BXXX, } \\$

XXX is the value of red, green and bluethen press the UP or DOWN to adjust the value.

Auto Test

With this function you can manually test the individual features

Press the UP or DOWN button until "Auto Test" is displayed, press ENTER.

Press ENTER to find the color you wish to test. Once you find a color you wish to test press the ENTER button.

Tilt invert

Press the UP or DOWN button until "Tilt Invert" is displayed, press ENTER.

Press the UP or DOWN button until "Yes" is displayed, press ENTER to confirm.

To deactivate select "NO", press ENTER to confirm.

Pan invert

Press the UP or DOWN button until "Pan Invert" is displayed, press ENTER.

Press the UP or DOWN button until "Yes" is displayed, press ENTER to confirm.

To deactivate select "NO", press ENTER to confirm.



Pan Angle

Press the UP or DOWN button until "Pan Angle" is displayed, press ENTER.

Press the UP or DOWN buttons to set your rotation

Backlight LCD

Press the UP or DOWN button until "Back LCD" is displayed, press ENTER.

Show mode

In this mode you can select your desired mode.

Press the UP or DOWN button until "Show mode" is displayed, press ENTER.

Press the UP or DOWN button to select the desired show mode, Auto or Sound press ENTER.

Slave mode

In this mode the unit functions as a slave to other units

Press the UP or DOWN button until "Slave mode" is displayed, press ENTER.

Press the UP or DOWN button to select the desired master or slave mode.

Wireless DMX


Switch the wireless system on with the on/off switch on the back panel.

Press the wireless button on the front panel to connect the system with your wireless transmitter. After the connection is linked the LED will flash faster.


To reset the wireless connection, press and hold the button until the LED stops flashing.

OPERATING INSTRUCTIONS

DMX connection.

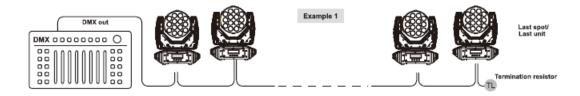

Master / Slave connection.

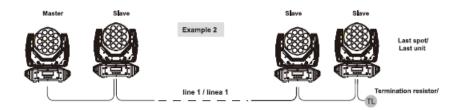



DMX CHANNEL SETTINGS

12 Channel settings:

12 Channel	DMX	Desciption
Dimmer	000 – 255	0 – 100% Dimmer
Macro Color	000 - 000	Unused
	001 – 005	Macro Color 1
	006 - 010	Macro Color 2
	011 – 015	Macro Color 3
	016 – 020	Macro Color 4
	021 – 025	Macro Color 5
	~~	Macro Color 6 t/m 47
	236 – 240	Macro Color 48
	241 – 245	Macro Color 49
	246 – 250	Macro Color 50
	251 – 255	Macro Color 51
Red	000 – 255	Red Dimmer
Green	000 – 255	Green Dimmer
Blue	000 – 255	Blue Dimmer
White	000 – 255	White Dimmer
Strobe	000 – 009	No strobe
	010 – 255	Strobe from slow to fast
Pan	000 – 255	Pan Moving 0 – 540 degree
Pan Speed	000 – 255	Speed pan moving
Tilt	000 – 255	Tilt Moving 0 – 180 degree
Tilt Speed	000 – 255	Speed tilt moving
	000 – 127	No function (DMX control)
Function	000 127	No function (BMX control)
	Macro Color Red Green Blue White Strobe Pan Pan Speed Tilt Tilt Speed	Dimmer 000 - 255 000 - 000 001 - 005 006 - 010 011 - 015 016 - 020 021 - 025 ~ 236 - 240 241 - 245 246 - 250 251 - 255 Red Green 000 - 255 Blue 000 - 255 White 000 - 009 010 - 255 Pan Pan Speed 000 - 255 Tilt 000 - 255 Tilt Speed 000 - 255

9 Channel settings:

DMX	9 Channel	DMX	Desciption
1	Pan	000 – 255	Pan Moving 0 – 540 degree
2	Tilt	000 – 255	Tilt Moving 0 – 180 degree
3	Pan Speed	000 – 255	Speed pan moving
4	Tilt Speed	000 – 255	Speed tilt moving
		000 – 200	Dimmer 0-100%
5	Dimmer/Strobe	201 – 247	Strobe slow-fast
		248 – 255	Full on
6	Red	000 – 255	Red Dimmer
7	Green	000 – 255	Green Dimmer
8	Blue	000 – 255	Blue Dimmer
9	White	000 – 255	White Dimmer



MAINTENANCE

The unit should be cleaned periodically to ensure the optimal performance, smudginess can decrease the life of the light source and the output of light is affected by the dust which can make the machine overheat. It is advised to perform maintenance 2 times a month. Be sure to disconnect the unit from the power socket before cleaning. Do not clean until the unit recovers a normal temperature, use the lens tissue or soft cotton cloth with alcohol and wipe gently. The cleaning frequency depends on the environment in which this unit operates, damp, smoky or dirty surroundings can cause greater accumulation of dirt on the optics. Never rub or press strongly on the panel.

SPECIFICATION

Head movement:Pan	630°
Head movement:Tilt	220°
Beam angle	8°
Light intensity	18000 lux @ 2m
No. of colours	Infinite
No. of LEDs	14x 10W Quad LEDs
DMX channels	10 or 14
Power Supply	100-240Vac / 50Hz
Consumption	160W
Dimensions	273 x 167 x 331mm
Weight	4.8 kg

CE (!) : Explanation

Please consult the authorities of your own country for detailed information regarding the licensing regime! In the following countries the regulative frequencies are :

NL: 2245-2495.0 MHz, D: 2384.0-2483.5 MHz, B: 2400-2483.5 MHz, F: 2465.0-2475.0 MHz, I: 2215-2500.0 MHz, E: 2304.5-2480.5 MHz, RUS: 2200-2500.0 MHz, CZ: 2200.0-2500.0 MHz,

POR: 2483.5 MHz





CE & R&TTE Declaration of Conformity

Importer: TRONIOS BV

Bedrijvenpark Twente 415

7602 KM - ALMELO

Tel: 0031546589299

Fax: 0031546589298

The Netherlands

Product number: 150.523

Product Description: MHL-1410Wispot14x 10W Quad, DMX 2.4Ghz

Regulatory Requirement: EN 60598-1/-2-17

EN 55015

EN 61547

EN 61000-3-2/-3-3

EN 300 440-1/-2

The product conforms to the essential requirements and other relevant previsions of the R&TTE Directive (1999/5/EC).

Almelo,

13-12-2012

Signed:

P. Feldman



Specifications and design are subject to change without prior notice..

www.tronios.com

Copyright © 2013 by TRONIOS the Netherlands