



**CX1**

**Outdoor Color-Changing Wireless  
Bluetooth Speaker**



**130.109**

**Please fully charge the speaker prior to first use!**

# ENGLISH

Congratulations to the purchase of this Max product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing becomes very hot. Do not touch it during operation and immediately after.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Secure the product with an extra safety chain if the unit is ceiling mount. Use a truss system with clamps. Make sure nobody stands in the mounting area. Mount the effect at least 50cm away from inflammable material and leave at least 1 meter space on every side to ensure sufficient cooling.
- This product contains high intensity LEDs. Do not look into the LED light to prevent damage to your eyes.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.



**DO NOT LOOK DIRECTLY INTO THE LENS.** This can damage your eyes. Persons who are subject to epileptic attacks should be aware of the effects that this light effect may have on them.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

**NOTE:** To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

*Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.*

## UNPACKING INSTRUCTION

---

**CAUTION!** Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damage from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.


### Remote Control



Light ON/OFF button

2.  Brightness up/down


3.  Bluetooth ON/OFF

4.  Press and hold to begin connecting a Bluetooth device

5. 


Choose one single favorite color to show from six colors.

(Red/Green/Blue/Purple/Lightgreen/Cyan)

-  Soft candle color

-  White color

-  Mode change(Bluetooth/Line-in)

-  Music light button, the light will pulse to the beat of music






Flash : 8 individual colors display one by one automatically.

Strobe: For lights to strobe on and off

Fade: For lights to fade in and out

Smooth: For Lights to smoothly change

### **To pair a Bluetooth device:**

1. Press the button  on the speaker and hold it for 3 seconds or press the button  on the remote control to turn on the Bluetooth mode, the LED indicator will flash blue slowly and the speaker emits a voice prompt.
2. Press the button  to make the speaker discoverable, The LED indicator flash blue quickly and the speaker emits a voice prompt.
3. Activate the Bluetooth function of your smartphone or other Bluetooth devices, select the "Y640" from the Bluetooth devices list to pair with the speaker

Note: if your device requests a password, enter "0000"

4. When connected, the LED indicator will stop flash and the speaker will emit a voice prompt.


### **To play music wirelessly**


1. Open the music player of your Bluetooth device to select a track
2. Press "Play/pause" button on the remote control or the music player to play or pause the selected track
3. To skip a track, press "Previous" or "Next" button
4. The volume can be adjusted on both of your music player and the speaker, press "Volume up" or "Volume down" to adjust the volume

### **Re-pairing or pairing a new devices**


1. If your device has paired with the speaker, you don't need pair it again next time, press



on the remote control or press  and hold it for 3 seconds to turn on Bluetooth function, your device will be connected to the speaker automatically within 10 seconds.

2. If you want to pair the speaker with a new devices, Press  to enter pairing mode, and follow the steps of “ To pair a Bluetooth device”

### **To play the music through line-in jack**

1. Press  to change the mode to “line-in”, the speaker will emit a voice prompt
2. Plug the 3.5mm audio cable into the line in jack, and insert another end to the audio device
3. Press “Play/Pause” button to play or pause the music
4. Press “Previous” or “Next” to skip the track
5. Press “Volume up” or “Volume down” to adjust the volume

### **To charge the speaker**

1. Plug the power adaptor into a convenient AC wall outlet and switch it on
2. Insert the other end of the adaptor into the DC in jack
3. The LED indicator will be red to indicate it is charging
4. When the LED indicator goes out, this means the battery is fully charged

### **Care for your speaker**

Please don't:

1. Immerse the speaker in water as it is protected from splashing only
2. Drop the speaker as this will invalidate your warranty

3. Open up the speaker as there are no user serviceable parts inside
4. Expose the speaker to extreme temperatures or rapid changes of hot to cold or vice versa

Please do:

1. Clean the speaker with a soft dry cloth and no detergents
2. Dry the speaker after use if it gets damp or wet

### **Specification**

Bluetooth range: 10m

IP rating: IP54 (Dustproof and splashproof)

Battery: 4400mAh Li-ion

Charging time: up to 10 hours

Play time: up to 18 hours

Frequency response: 120Hz – 20K Hz

Output power: RMS 5W



tronios  
Sound & Light

## Declaration of Conformity

Manufacturer: TRONIOS BV  
Bedrijvenpark Twente 415  
7602 KM – ALMELO  
+31(0)546589299  
+31(0)546589298  
The Netherlands

Product number: CX1

Product Description: 130.109

Trade Name: MAX CX1

Regulatory Requirement: EN 55032:2012+AC 2013  
EN 55024:2010  
EN 61000-3-2:2014  
EN 61000-3-3:2013  
EN 300 328 V.1.9.1  
EN 301 489-1 V1.9.2  
EN 301 489-17 V2.2.1

I hereby declare that the product meets the requirements stated in Directives 2014/35/EU and 2014/30/EU and conforms to the above mentioned Declarations.

Almelo,

21-02-2017

Name : J.M. Velders

Signature :