




PHOBOS-12PSD PHOBOS-15PSD

PORTABLE SPEAKER (CLASS D AMPLIFIER & DSP BUILT IN)

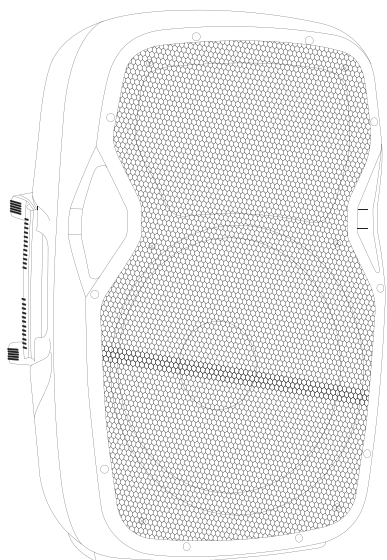

USER MANUAL



Intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

CAUTION: Risk of electrical shock DO NOT OPEN!

CAUTION: To reduce the risk of electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

WARNING: To prevent electrical shock or fire hazard, this apparatus should not be exposed to rain or moisture, and objects filled with liquids, such as vases, should not be placed on this apparatus. Before using this apparatus, read the operating guide for further warnings.

WARNING: POWER SUPPLY

Ensure that the mains source voltage (AC outlet) matches the voltage rating of the product.

Failure to do so could result in damage to the products and possibly the user.


Unplug the product before electrical storms occur and when unused for long period of time to reduce the risk of electric shock or fire.

IMPORTANT SAFETY INSTRUCTIONS

WARNING : When using electrical products, basic cautions should always be followed,

- 1.Read these instructions.
- 2.Keep these instructions.
- 3.Heed all warnings and follow all instructions.
- 4.Do not use this apparatus near water.
- 5.Clean only with a dry cloth.
- 6.Do not block any of the ventilation openings. Install in accordance with manufacturer's instructions.
- 7.Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat
- 8.Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding plug. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 9.Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point they exit from the apparatus.
- 10.Only use attachments/accessories provided by the manufacturer.

Controls and Connections:

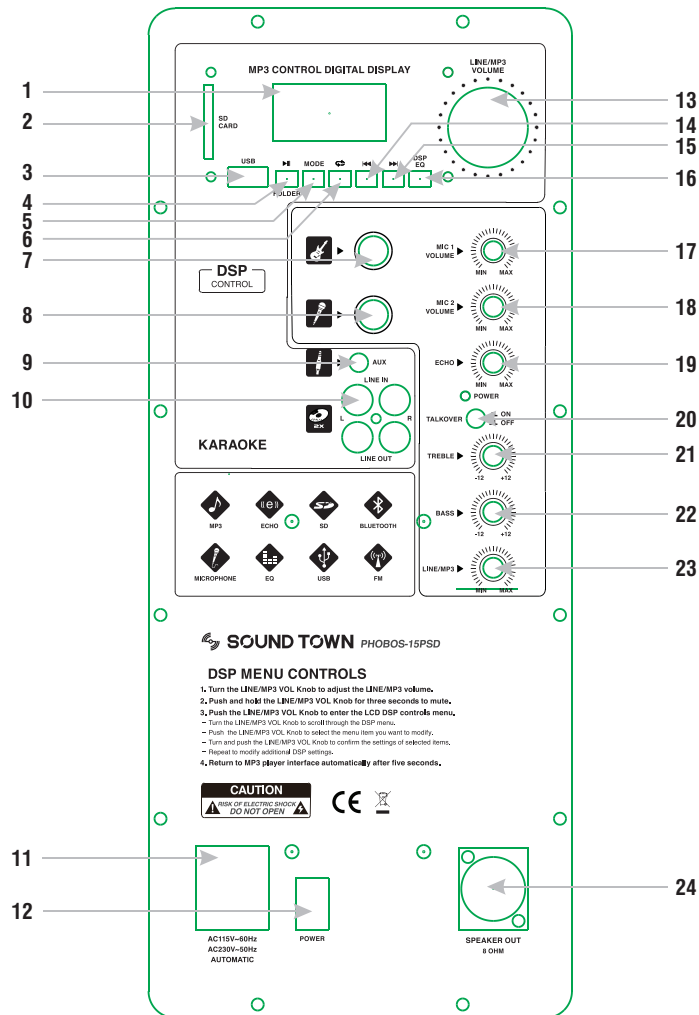

1. LCD screen	13. Line/MP3 volume & DSP control knob *
2. SD input	14. Previous song / Previous channel
3. USB input	15. Next song / Next channel
4. Play / Pause	16. DSP/EQ selector
5. Mode (USB, SD, FM, BT)	17. Mic 1 volume control
6. Recycle (all songs recycle)	18. Mic 2 volume control
7. Mic 1 input (1/4" Jack)	19. ECHO
8. Mic 2 input (1/4" Jack)	20. Talkover switch (on / off)
9. 3.5mm AUX input	21. Treble control
10. RCA line input	22. Bass control
11. Fused IEC mains	23. Input Gain
12. Power switch	24. Speakon power output

* DSP CONTROLS

1. Turn the LINE/MP3 VOL knob to adjust the LINE/MP3 volume.
2. Push and hold the knob for 3 seconds to mute.
3. Push the knob to enter the LCD DSP controls menu.
 - Turn the knob to scroll through the DSP menu.
 - Push the knob to select the menu item you want to modify.
 - Turn and push the knob to confirm the settings of selected items.
 - Repeat to modify additional DSP settings.
4. Return to MP3 player interface automatically after 5 seconds.

PHOBOS-12PSD



PHOBOS-15PSD

