



BEAMZ
MADE
EAZY

151.502 V1

PS40Z SPOT ZOOM

QUICK **START GUIDE**

CONTROL MENU

Menu			Description
DMX Addr	A001	001-512	DMX address setting
Mode	3CH	3	DMX channel mode
		8	
Auto	Auto		Automatic program
Sound	Soud		Sound to light program
Manual	F255	000-255	Manual setting
	St99	00-99	
	r255	000-255	
	G255	000-255	
	b255	000-255	
	u255	000-255	

DMX CHANNELS

3 Channels

Channel	Function	Value	Description
1	Dimmer	000-255	Master dimmer 0-100%
2	Zoom	000-255	Zoom, from far to near
3	Mode	000-050	DMX
		051-199	Automatic program show
		200-250	Sound to light show
		251-255	Reset

8 Channels

Channel	Function	Value	Description
1	Dimmer	000-255	Master dimmer 0-100%
2	Strobe	000-255	Strobe, from slow to fast
3	Colour	000-255	Red, intensity 0-100%
4		000-255	Green, intensity 0-100%
5		000-255	Blue, intensity 0-100%
6		000-255	White, intensity 0-100%
7		Zoom	000-255
8	Mode	000-050	DMX
		051-199	Automatic program show
		200-250	Sound to light show
		251-255	Reset

TROUBLE SHOOTING

The checklist below may help you troubleshoot in the unlikely event that a problem occurs while using the product:

Symptom	Possible cause	Suggested action
No response from fixture.	No power to fixture.	Check that power is turned on. Check cables and connections.
	Fuse blown or internal fault.	Replace main fuse or contact Beamz support or Beamz authorized service partner. Do not remove base or yoke covers. Do not attempt to replace a fuse or carry out any repairs or service that are not described in this User Manual unless you have both authorization from Beamz support or Beamz authorized service partner.
Fixture resets correctly but does not respond (or does not respond correctly) to the controller.	The controller is not connected. Bad DMX-line.	Connect controller. Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	DMX-line has no end resistance.	Insert DMX terminator plug in DMX output socket of last fixture on DMX-line.
	Incorrect fixture addressing. A fixture is defective and is disturbing data transmission on the DMX-line.	Check fixture address and DMX mode settings. Unplug DMX IN and OUT connectors and connect them directly together to bypass one fixture at a time until normal operation is regained. Have defective fixture serviced by an authorized technician.
	Pin 2 and 3 are reversed in XLR connection.	Inspect connections and cables. Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.
Error after fixture reset.	Effect requires mechanical adjustment.	Check fixture's software version and error messages for more information. Contact Beamz support or Beamz authorized service partner.
Light output cuts out intermittently.	Fixture too hot.	Allow fixture to cool. Reduce ambient temperature. Ensure free airflow around fixture. Clean fixture if necessary.
	LEDs damaged	Disconnect fixture and contact Beamz support or Beamz authorized service partner.
	The power supply settings do not match local AC voltage and frequency.	Disconnect fixture. Check settings and correct if necessary.



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

