

## Packing List

1. Fog Machine 1pcs
2. Power cable 1pcs
3. User Manual 1pcs

## Specifications

Voltage: AC220V/50HZ

Power Consumption: 1200W

Fuse: 10A

Tank Capacity: 2.3L

Control Mode: Wire control / Remote control

Packing size: 56\*33\*28 CM

W: 7.0KG

# BIM-1200 Fog Machine

## Use Manual

---

## Guidance

- 1.Thank you for having chosen our company's fog machine. For your own safety, please read this user manual carefully before installing the device. By following the suggestions found in this user manual, you can look forward to the reliable and satisfactory performance of your fog machine for years to come.
2. When receiving the machine, open the package, check carefully whether the machine is damaged or the accessories are lost, if problems found, please contact the supplier. And check the spray nozzle carefully, avoiding any foreign materials to choke the nozzle.
3. Before connect with power, you should check whether the power you use is suit for the fog machine or not.
- 4.Keep the fog machine flat, then open the fo oil tank, and filling with high quality fog oil, then fasten the cap.
5. Connect the controllers with the fog machine, then you can control the fog machine with the controllers.

## Notice

- 1.This fog machine should be used in dry area, and note that the fog machine has grouding requirement. Please avoid any water and rain fall in the machines, if water and rain fall in, turn off the power immediately. The room for cool should be at least 20cm. Keep far away from children, fire, explosive and flammable things. And avoid scalding.
2. It is a normal thing to spray out some water when the first time use.
- 3.When the fog oil be used up, you should add in time. If the fog machine work without fog oil, the pump and other parts will get damaged. When adding oil, you should turn of the power, and the carefully to avoid spill over to cause short circuit.
- 4.If the fog turns less, and the pump makes noise, or can not produce fog, you should turn off the power and at the same time check the oil capacity, fuse, controller and power plug. If all of these are normal,

please connect the power with the plug and try again, if the problems still can not be solved, you should contact supplier.

- 6.The fog machine should work under professional worker' s supervistion. Please do not add flammable liquids, gas and perfume into the fog oil tank.
- 7.When working, do not touch power wire.
- 8.When long time no use or after use, you should tear off the plug.

## Maintaince

- 1.Bad fog oil will cause choke, so please use high quality fog oil.
- 2.Too heavy fog oil and unclean fog oil will cause choke, so you should clean the fog machine when heating by use 1:100 diluted acid after used about 40 hours.

## Connection for DMX512

The fog machine can be controlled by DMX signal, you should use the 3 pin XLR wire to connect, The distance can not over 100m.

Notice: Some controllers can work normally only after exchange of

“+” “-”。

Address Code Setup:

Now the fog machine has one channel, and the scope of the address is from 0-255.

