


Instellen aantal beelden op het scherm.

Voor het instellen van het aantal beelden op het scherm dient u het volgende te doen.

Druk plus minus 3 seconden op het scherm, nu ziet u het pop up menu.

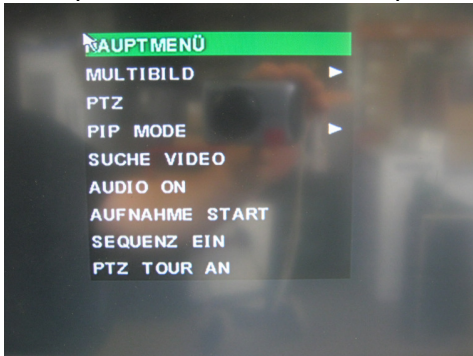


Door op multibild te drukken gaat het volgende popup menu open, u kunt nu kiezen uit drie mogelijkheden.

CH 01 -0 4

CH 05 -0 8

CH 01 -0 8

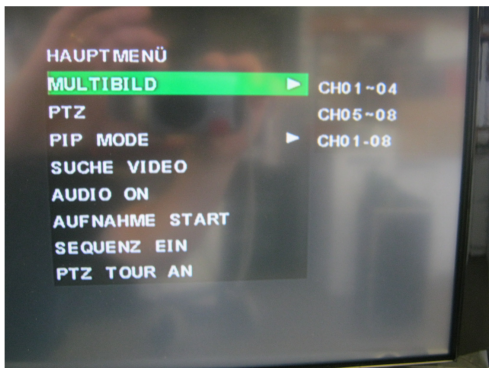

Door op de desbetreffende icoon te drukken zal deze ingesteld worden.


In het programma Netviewer kunt u de instelling met de muis uitvoeren.



Selecteer de gewenste instelling.

Für das Herstellen der Zahl Abbildungen auf dem Schirm können Sie das folgende tun.

Drücken sie plus minus 3 Sekunden auf das Schirm, jetzt sehen sie das Popup Menu.

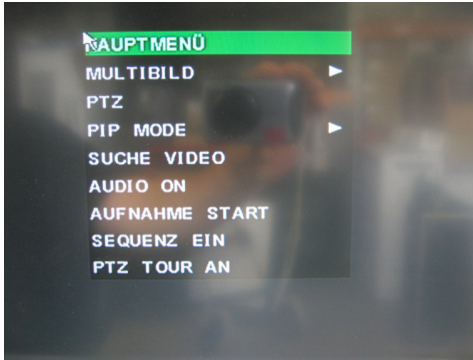


Drücken sie auf multibild, sie können jetzt Wahlen zwischen die verschiedene Möglichkeiten.

CH 01 –0 4

CH 05 –0 8

CH 01 –0 8

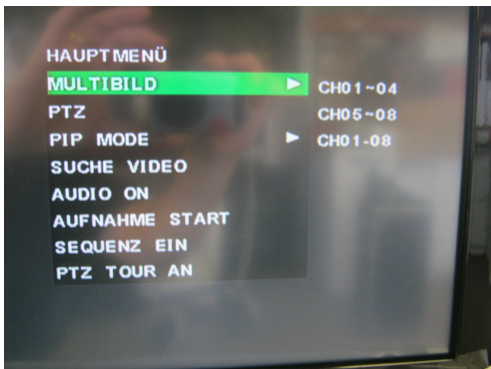

Wann sie auf einer dieser Einstellungen drucken wird das Bild hergestellt.


In das Program Netviewer können Sie die Einstellung mit der Maus ausführen.



Selektier die gewünschte Einstellung.

To change the number of pictures on the screen you have to do the following procedures.

Push the screen for about 3 seconds the popup menu will open.

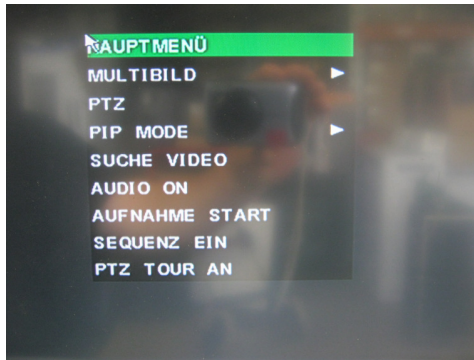


Then push multi pics an other popup will open, you can choose out of the following settings:

CH 01 –0 4

CH 05 –0 8

CH 01 –0 8

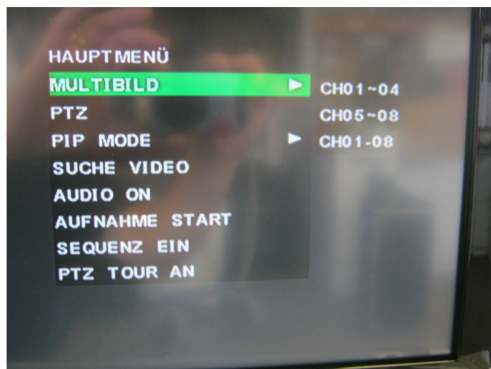

When you pus one of these settings this will be set.

In the program Netviewer you can change the settings with the mouse.



Select the correct icon.

