

Home audio set workstation



INSTRUCTION MANUAL


Thank you for purchasing your Kam Studio Desk 4.


To ensure that it brings you many years of pleasure, please follow these few simple steps:

Check all parts are enclosed - see checklist. Follow all instructions for construction carefully. Bradawls are sharp instruments and should be treated with care. Only use tools as intended.

Please tighten all nuts & bolts periodically. As with all desks & tables it is possible that these may loosen with time & use.

Please use a soft damp cloth to clean unit - Use of abrasives or cleaning solutions may cause damage.

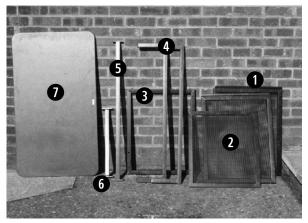






PARTS CHECKLIST

- 1. Side Panels x 2
- 2. Top Panel
- Square end frame
- 4. Top long brace x 2
- 5. Long middle brace
- 6. Small middle brace
- 7. Table Top
- 8. Wheels x 6
- 9. Nuts, bolts, woodscrews, washers, bradawl and allen key

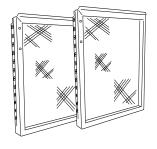




Locate the two side panels with grills attached.




STEP 2

Then locate the small middle brace for the side panels.

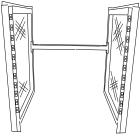

STEP 3

Connect the middle brace to the third from top holes on the side panels using the longer nuts and bolts.

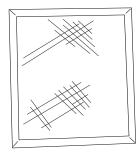

STEP 4

Locate the top panel with grill attached.






Attach the top panel (no bolts/screws needed).




STEP 6

Locate the two top braces for the table.

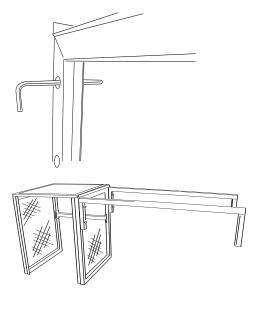


STEP 7

Attach the top two long braces to the right side panel using the smaller nuts and bolts, threading them through the right side panel first making sure that the washer is on the top brace side.



STEP 8

Locate the square end frame.

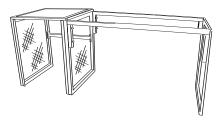


STEP 9


Attach to the ends of the top long braces using the top through holes and the last smaller nuts and bolts making sure you thread them through the square end first.



STEP 10

Locate the long middle brace.

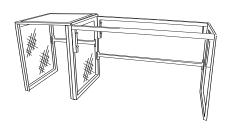




STEP 11

Connect the long middle brace to the right side panel and the square end frame with the longer nuts and bolts.




STEP 12

Locate the table top.

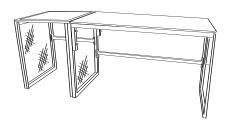

STEP 13

Attach the table top with the wood screws provided making sure that you have it the right way up. - see labels for information.

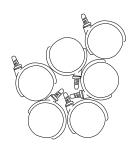

STEP 14

Attach the wheels to the bottom of the two side panels and the square end frame.

Your Studio Desk 4 is now ready to use!



For information on the entire Kam range and all the latest new products visit:

www.kam.co.uk