

TE cabinet assembly instructions (600 wide)

sketch map (A)

Use the M5*10 Phillips pan head screw and flange nut to fix the mounting angle to the frame.

sketch map (B)

Use the M5*10 Phillips pan head tapping screw to fix the other mounting angles to the frame.

sketch map (C)

Use the M5*10 Phillips pan head tapping screw to fix the caster tray to bottom of the frame.

sketch map (D)

Use the M5*10 Phillips pan head tapping screw to fix the bottom panel to the inside bottom of the frame.

sketch map (E)










Use the hexagonal socket B head screw and flange nut to fix the mounting rail to the mounting angle, and then fix the L shaped supporting brackets to the mounting rails.

sketch map (F)

Use the M5*10 Phillips pan head tapping screw to fix the fan unit to the inside top of the frame.

sketch map (G)

Use the M5*10 Phillips pan head tapping screw to fix the top cover to the frame.

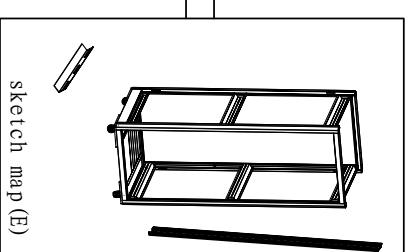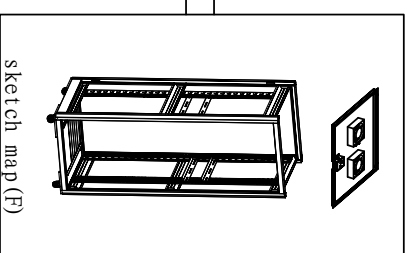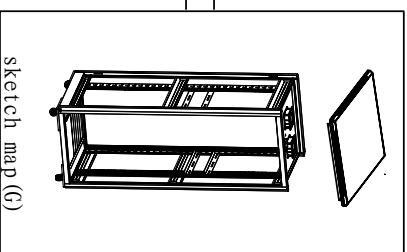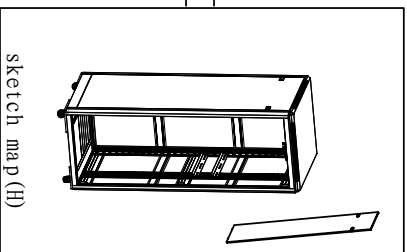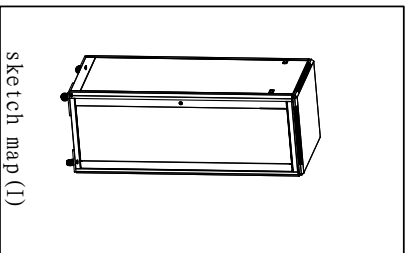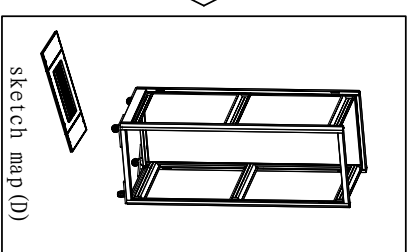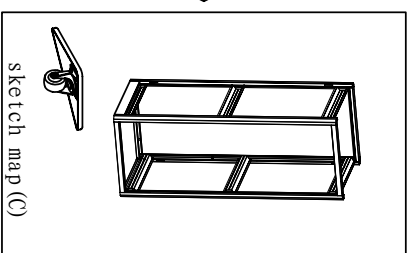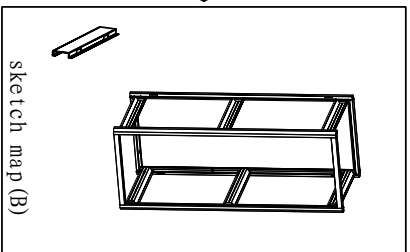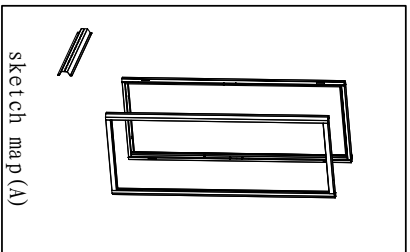

sketch map (H)

Fix the bottom brackets onto the bottom of the side panels /back panel, and install the flush latch into the panels.

sketch map (I)

Place the door pivot pin into the mounting hole in the bottom of the frame, and then carefully place the door onto the door pivot pin. Pull down the latch at the top of the door. Set the door upright and release the top latch. Make sure the top of the door match up with the frame.