

## SW-2

SNOW MACHINE

Item ref: 160.565UK

User Manual





Caution: Please read this manual carefully before operating  
Damage caused by misuse is not covered by the warranty

## Introduction

Thank you for choosing the SW-2 DMX snow machine for stage and events special effects. This product is designed to produce high volume snow output on demand for festive and themed events. Please read these instructions in full to gain the best results from this item and avoid damage to the unit through misuse.

## Unpacking

Your SW-2 should reach you in good condition and should be supplied with IEC mains lead(s) and a wired remote control.

If there are any signs of damage or items missing from the packaging, contact your dealer immediately.

## Warning

To prevent risk of fire or electric shock, do not expose electrical parts to rain or moisture.

If liquids are spilled on areas other than the fluid tank or nozzle, disconnect the mains, allow the SW-2 to dry out and have it checked by qualified personnel before further use.

Avoid any impact, dropping or extreme pressure to the housing.

No user serviceable parts inside - do not open the case.

Allow the SW-2 to acclimatize to room temperature before operating.

Refer all servicing to qualified service personnel.

## Placement

The SW-2 has a built-in snow fluid container and should be operated in an upright position.

If free-standing, ensure that the SW-2 is positioned on a stable, non-slip surface.

If mounted at height, use the integral mounting bracket and attach a safety cable for added security.


## Safety

- Check for correct mains voltage and condition of IEC lead before connecting to power outlet
- Check the condition of the remote lead and ensure that it is not trapped
- This unit must be earthed
- This unit produces a snow effect using foam, which may cause a slip hazard on some floor surfaces

## Cleaning

- Use a soft dry or slightly damp to clean the casing
- Do not use strong solvents for cleaning the unit
- Clean the foam mechanism periodically by operating with distilled water instead of snow fluid

## Rear Panel

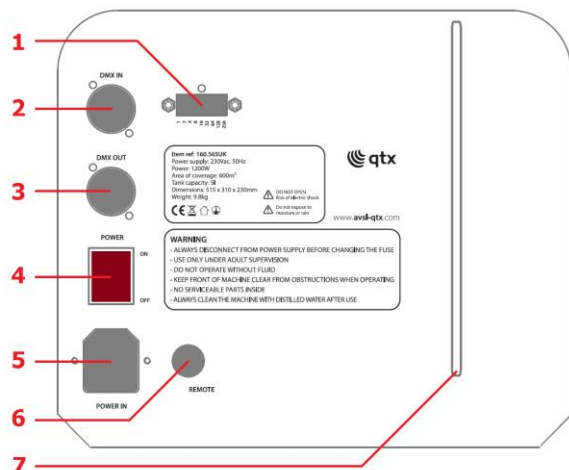


1. DIP switches for DMX address setting
2. DMX input (3-pin XLRM)
3. DMX output (3-pin XLRF)
4. Power on/off rocker switch
5. Mains inlet (IEC male) and fuse holder
6. Remote control connection (5-pin DIN)
7. Fluid level indicator

## Setting up

The SW-2 requires snow fluid, which forms small foam drops to create the snow effect. It is recommended to use qtx snow fluid for best results (160.578, 160.579) A chart for recommended fluids is included further along in this document.

- Unscrew the top cap of the fluid tank (removable) and fill with the selected snow fluid
- The SW-2 can accommodate a complete 5 litre snow fluid refill if preferred
- Replace the cap and close securely, ensuring the pipe is fed down to the bottom of the bottle so that a consistent flow of fluid is supplied to the machine
- Connect the remote control to the 5-pin DIN connector on the rear panel (6)
- Connect the IEC mains lead supplied to the rear mains inlet (5)

## Remote control operation

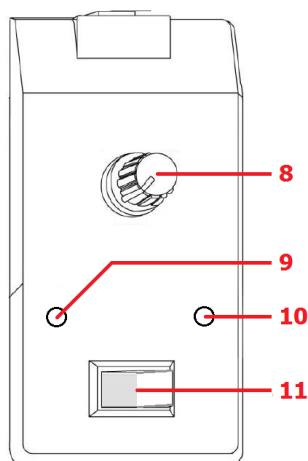


8. Snow output control – adjusts the amount of fluid delivered by the pump
9. Snow effect indicator – illuminates when effect is activated
10. Power indicator – illuminates when mains power is switched on
11. Snow effect on/off rocker switch – switches the fan on or off

- Make sure that the remote control rocker switch (11) is set to the "off" position at startup
- Switch the mains power on (4) at the rear of the unit And the power indicator (10) will light
- Set the output control (8) to the lowest setting and switch the rocker switch on
- The snow effect indicator (9) will light to show that the fan is active
- Adjust the output control to the required density of snow pumped into the nozzle when active
- Switch the rocker switch off to stop the fan and thus stop the effect

## DMX operation

For DMX operation, a single channel controls both the fan and snow output pump.

- Connect DMX input from a controller or prior device to the XLRM connector (2) on the rear panel
- Connect further DMX devices from the XLRM connector (3) on the rear panel
- Set the DMX address (single channel) using the DIP switches (1) in binary format as shown below
- 

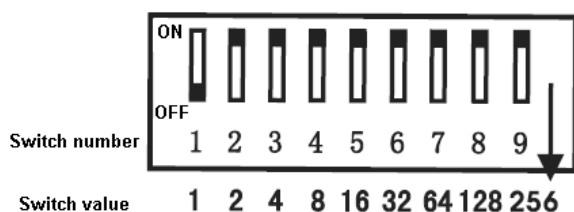

DMX Address	DIP Switches								
	1	2	4	8	16	32	64	128	256
1	1	0	0	0	0	0	0	0	0
2	0	1	0	0	0	0	0	0	0
3	1	1	0	0	0	0	0	0	0
...	..	..	..	..	..	..	..	..	..
410	0	1	0	1	1	0	0	1	1

DMX control values operate the snow machine as follows.

Value	Fan	Fluid pump
0 - 5	Fan off	and no snow output
6 - 255	Fan on	and snow output

When in use for long periods, periodically check the fluid level indicator and refill if necessary. Check that the foam produced does not cause a slip hazard on the floor surface and clean if necessary. Switch of mains power when not in use. Disconnect from mains before moving or storage.

## Specifications

Power supply	220-240Vac, 50/60Hz (IEC)
Tank capacity	5 litre
Power	1200W
Volume per minute	50m <sup>3</sup>
Remote control	Wired remote (on/off & output volume)
DMX channels	1 channel (fan on/off & output 1 - 100%)
Dimensions	320 x 300 x 525mm
Weight	7.6kg

## Troubleshooting

No light on mains switch	Check mains voltage is correct and socket is switched on
	Check IEC lead is OK and connected properly
	Check mains fuse in IEC connector and fuse in plug top
	If fuse blowing repeatedly, refer to qualified service personnel
No power light on remote	Check remote control is connected properly
No snow output when using remote control	Check snow fluid level
	Check that rocker switch is on and output control is turned up
	Check that nozzle cloth is not blocked and clean with water if necessary
No snow output when using DMX control	Check that DMX lead is connected properly and correct start address is set
	Ensure that a value between 6 and 255 is being transmitted on the channel



**Disposal:** The "Crossed Wheelie Bin" symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines

*Errors and omissions excepted.  
Copyright© 2013. AVSL Group Ltd.*

# Effects Fluid Chart

<b>Bubble Fluid</b>		<b>Volume</b>		<b>Description</b>	<b>Results</b>	<b>For use with</b>	
160.574UK	1 Litre	Bubble fluid		Light, long-lasting bubbles		160.462UK, 160.560UK 160.562UK, 160.563UK 160.564UK	
160.575UK	5 Litre						
160.576UK	1 Litre	UV bubble fluid		Light bubbles which glow in UV light			
160.577UK	5 Litre						
<b>Snow Fluid</b>		<b>Volume</b>		<b>Description</b>	<b>Results</b>	<b>For use with</b>	
160.578UK	1 Litre	Snow fluid		High quality snow fluid. Lasts 30% longer than other standard fluids		160.565UK, 160.569UK	
160.579UK	5 Litre						
<b>Fog Fluid</b>		<b>Volume</b>		<b>Description</b>	<b>Colour</b>	<b>For use with</b>	
<b>Results</b>							
<b>Stock Code</b>	<b>Volume</b>	<b>Description</b>	<b>Colour</b>	<b>Dispersion</b>	<b>Density</b>	<b>Stability</b>	<b>Fog colour</b>
160.643UK	1 Litre	Standard fog fluid	Yellow	Quick	Light	Low	White
160.582UK	5 Litre						
160.587UK	1 Litre	High grade fog fluid	Orange	Slow	Medium	Good	White
160.588UK	5 Litre						
160.644UK	1 Litre	High quality fog fluid	Pink	Slow	High	Good	Thick white
160.583UK	5 Litre						
160.589UK	5 Litre	Premium fog fluid	Clear	Slow	Very high	Excellent	Opaque White
160.592UK	1 Litre	Low level fog fluid	Clear	Slow	Highest	Excellent	Opaque White
160.593UK	5 Litre						
160.670UK	20ml	Fog machine cleaner	Clear	Extends life of your fog machine			All fog machines
<b>Haze</b>		<b>Volume</b>		<b>Description</b>	<b>Colour</b>	<b>For use with</b>	
<b>Results</b>							
<b>Stock Code</b>	<b>Volume</b>	<b>Description</b>	<b>Colour</b>	<b>Dispersion</b>	<b>Density</b>	<b>Stability</b>	<b>Haze colour</b>
160.590UK	1 Litre	High quality haze fluid	Clear	Slow	High	Good	Thick white
160.591UK	5 Litre						